

O R I G I N A L  
**HENKELMAN**  
*vacuum systems*

USER MANUAL  
FOR  
SINGLE CHAMBER  
DOUBLE CHAMBERS  
SPECIALS

Ensure that you have the following information on hand for explanations and/or comments.

**MACHINE CODES / SPECIFICATIONS**

Machine type:.....		Number:.....	
<input type="checkbox"/> Single seal	<input type="checkbox"/> Seal 1-2	<input type="checkbox"/> Digital standard	<input type="checkbox"/> Display info
<input type="checkbox"/> Cut-off seal	<input type="checkbox"/> Bi-active seal	<input type="checkbox"/> Digital sensor	Code 1 .....
<input type="checkbox"/> Double seal	<input type="checkbox"/> Soft-air	<input type="checkbox"/> Gas flushing	Code 2 .....

Henkelman BV - P.O. Box 2117 - 5202 CC 's-Hertogenbosch  
Telephone: +31 (0)73 - 621 36 71 - Telefax: +31 (0)73 - 622 13 18  
E-mail: [vacusys@henkelman.com](mailto:vacusys@henkelman.com) - Internet: [www.henkelman.com](http://www.henkelman.com)

# CONTENTS

Contents	2
Range single chambers / double chambers and specials	3
Introduction - machine codes / specifications	4
The most important components in the machine	5
Installation instructions	6
• Safety and installation	6
• Installation and safe usage of a gassing system	6
Machine versions	7
Switching the machine on	9
Starting the machine	10
Description of the control panel	11
Description of panel display - Individual cycles	13
Programming values with the control panel	15
• Manual (re)programming - digital time control	15
• Manual (re)programming - sensor control	16
• Automatic (re)programming - digital time control	17
• Automatic (re)programming - sensor control	18
Operational control of the machine	19
Maintenance of the machine	20
• General maintenance	20
• Maintenance schedule - Oil filling procedure	21
• Conditioning Programme "C"	22
• Oil types - maintenance of the seal bar	23
• Dimensions and specifications of service components for maintenance	25
Electrical diagrams	26
Pneumatic diagrams	29
Important comments on special versions & applications	31
• Machine with gas flushing system	
• Packaging liquid products	
Problem solving	32
Liability - Guarantee	34
Machine specifications	35
Manufacturer's default settings	37

*This manual relates to the Henkelman Floor models and double chamber models. The general instructions apply to these categories of models. Henkelman BV cannot be held liable for any damage caused by deviating machine specifications.*

*This manual has been created with the utmost care. Henkelman BV will not accept any liability for any errors in this manual and/or the consequences of the incorrect interpretation of this manual.*

*Henkelman BV is not liable for damages and/or problems caused by the use of components not supplied by Henkelman BV*

*If this manual does not contain instructions for certain repairs, adjustments or maintenance, please contact your dealer or Henkelman B.V.*

*Henkelman BV reserves the right to change specifications and/or components without prior notice.*

*All rights reserved. Nothing in this publication may be copied or made public by means of photocopies, printing or any manner whatsoever without prior permission from Henkelman BV*

# SUPERIOUR QUALITY IN MAP/VACUUM PACKAGING TECHNOLOGY

---

## SINGLE CHAMBER



H300 AA

H300

H400AA

H400 RVS

## DOUBLE CHAMBER



H500

H700

H600

H800

## SPECIALS



H325

H350

# INTRODUCTION

Henkelman is a name that stands for quality in the vacuum / MAP (gassing) packaging technology field. This quality is a product of our vision and the associated, tried-and-tested approach. Specialist knowledge of the market and the product guarantees solid machines that meet high quality standards and provide optimum operational safety and convenience.

The aim of Vacuum / MAP packaging technology is to add significant product value by means of extended product storage life, increased product hygiene or better product presentation. Using ORIGINAL HENKELMAN packaging systems and their applications will benefit the operational efficiency, quality, storage life and presentation of products.

The range of machines consists of a large number of models and versions that are capable of meeting specific and individual user requirements in various sectors of industry.

The packaging systems are used in the food and non-food sectors, retail and wholesale businesses and small and large-scale industrial production units.

All the packaging systems in this manual have the following items as standard:

- ♦ Digital time control panel with 9 individually adjustable programs.
- ♦ Double seal - Standard time controlled seal system with 2x 3.5 mm concaved wire.

The following options (for additional costs) are applicable to most packaging systems:

- ⇒ Cut-off seal - (Standard time controlled seal system with 1x 3,5 mm concaved seal wire and 1 x cut-off wire Ø1.1 mm)
- ⇒ 8 mm seal - (Standard time controlled seal system with 1x 8 mm flat seal wire)
- ⇒ Seal 1-2 - (Advanced time controlled seal system with separate adjustable seal and cut-off time) 1x 3.5 mm concaved seal wire and 1 x cut-off wire Ø1.1 mm
- ⇒ Bi-active seal - Time controlled double-sided seals system with 2 flat seal threads 1 x 5 mm and 1 x 8 mm
- ⇒ Gas flushing system- Injection of gas for MAP packaging applications
- ⇒ Sensor control - Digital control panel with pressure sensor
- ⇒ Soft-air - Controlled decompression system
- ⇒ Liquid insert plate - additional component for the packaging of liquid products.

(All versions are described in detail on pages 7 and 8)

The complete machine specifications are provided in the Henkelman catalogue. If you have any further questions or comments, please contact your supplier or Henkelman BV for further information.

If you have any questions or comments regarding the operation or application of your machine, ensure that you have the information printed on the front of this manual on hand for explanations or comments.

# THE MOST IMPORTANT COMPONENTS IN THE MACHINE

Seal bar

Contra-bar / Silicon profile

Lid seal



Lid lock

Vacuum meter

Control switch

Machine plate

Control panel

Main switch

Oil filling plug

Oil sight glass

Oil drainage plug



# INSTALLATION INSTRUCTIONS

## Safety and installation

- ❑ Never package products under vacuum that may be damaged during the packaging process. Live goods may never be vacuum packed!
- ❑ The machine must be placed on a stable and level surface. A level surface is required to allow the machine to be closed effectively.
- ❑ The direct vicinity of the machine must provide sufficient ventilation space. Machines may not, therefore, be built in and there must be a gap of at least 5 cm around the machine.
- ❑ Check that the voltage stated on the type plate (on the back of the machine) corresponds with the mains voltage. If you have any doubt, contact your supplier or Henkelman BV
- ❑ If you are installing a three-phase version, check the direction of the pump.

☞ The earth connection (green/yellow) of the machine must be connected correctly. Consult your installer if you have any doubt.


- ❑ Check the oil level of the vacuum pump.
- ❑ The ambient temperature around the machine must be between 5° and 30°C. If this is not the case, the type of oil used must be changed. For the correct type of oil refer to page 36 or consult your supplier/Henkelman BV
- ❑ Prevent the machine from tilting during installation; this may damage the vacuum pump.

## Installation and safe usage of a gas flush system

☞ **NEVER** use flammable gasses or gas mixtures containing oxygen. If these gas mixtures are used there is a risk of the vacuum pump and/or machine exploding. The Guarantee will lapse and Henkelman will not be held liable in any way whatsoever if accidents and/or damage result from the use of the gasses stated.

- ❑ The gas bottles must always be secured correctly. If the gas function and/or the machine are not in use, the gas bottle must be closed at the main valve. This will prevent unnecessary leakage.
- ❑ If the machine is fitted with a gas flush system, the pressure on the pressure-reducing valve of the gas bottle may never be higher than 1 atmosphere/1 ATO. Higher pressure will damage the machine. Consult your gas supplier for more information on the use and installation of gas bottles. Some models are fitted with a connection for external seal pressure. This will be discussed on pages 8 and 36.

## MACHINE VERSIONS

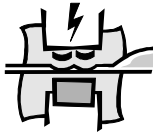


### DOUBLE SEAL

The vacuum bag is sealed with two 3.5 mm concaved wires. The wires used have a rounded concaved shape. This shape ensures that moisture and dirt on the seal seam is pushed to the side, closing the packaging cleanly and completely. Two seal wires provide extra security against rough handling of the packaging during transport and storage.



### CUT-OFF SEAL

The vacuum bag is sealed with two wires. The inner seal wire is 3.5 mm wide and has a rounded concaved shape, and the outer seal wire has a diameter of Ø 1.1 mm. The outer wire has two functions: this wire creates a narrow seal, and the remaining flap can be torn off manually due to the fact that the wire almost completely burns through the bag. This provides optimum product hygiene during transport and storage.

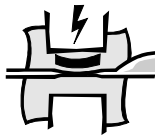


### 8 mm SEAL

The vacuum bag is sealed with a single flat seal wire, 8 mm wide. This seal system is used especially for packaging in which presentation is an important factor.




### SEAL 1-2

The vacuum bag is sealed with two wires. One wire is 3.5 mm wide with a rounded concaved shape, and the other wire has a diameter of Ø 1.1 mm. The function of SEAL 1-2 is the same as the CUT-OFF but provides the option to control the wires separately. This makes it possible to activate the cut-off wire for longer time than the seal wire. This modification makes it possible to seal and cut-off almost any type of bag, e.g. shrink bags.

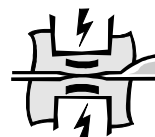

### BI-ACTIVE SEAL

 Bi-active seal has a seal wire both on top and bottom. This principle enables seals to be produced from the bottom and the top simultaneously, with the aim being to produce the optimum amount of heat in the vacuum bag. This seal system is applied to bags with a thickness of 200+ µm, or, for example, laminated aluminium bags.




### GAS FLUSH SYSTEM

A gas flush system provides the option to fill the vacuum bag with a quantity of gas after the termination of the vacuum cycle. This option is frequently used for vulnerable or fragile products or if the gas provides the product with added value (e.g. product presentation or storage life).



### SOFT-AIR (slow decompression)

 Soft-air is a system that the chamber can be slowly decompressed for a programmable period subsequent to vacuuming and sealing. The vacuum chamber is decompressed so slowly that the vacuum bag can shape itself around the product without damaging the product or the vacuum bag. Soft-air is used primarily for the packaging of soft and/or vulnerable products (e.g. fish), or products with hard protrusions (e.g. spare ribs).




### DIGITAL TIME CONTROL

All the machines are equipped with digital controls as standard. These controls allow the separate programming of the time control of all sub-processes in the packaging process (vacuum, seal, decompression and possibly gas flush and soft-air). It is also possible to record the settings of frequently used packaging processes in one of the 9 programs. The controls are extremely easy to comprehend and simple to operate.


## MACHINE VERSIONS
 
### SENSOR CONTROL



With Sensor control, the packaging process is controlled by means of an extremely accurate pressure sensor. This pressure sensor ensures that the process is finished accurately according to pressure values, expressed in percentages, programmed in advance. Application of the pressure sensor ensures consistent packaging results and an optimum cycle time. Sensor control is normally used in combination with a gas flush system.

### SENSOR CONTROL - Vacuum Plus time

 


Sensor control makes it possible to program an additional vacuum period - vacuum plus time after reaching the programmed pressure. Vacuum plus time is used to allow the air trapped in the packaging to escape, thereby creating an optimum vacuum. Vacuum plus time can only be used when the vacuum sensor pressure has been set to 99%.

### SENSOR CONTROL - Time control

A sensor control can also be programmed for normal time control. The sensor will then be deactivated and the packaging process will be carried out according to the programmed cycle times.

## EXTRA FUNCTIONS

### SERVICE HOURS PROGRAM

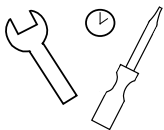

The service hours program is a service program which is used for installing a number of hours after which the panel shows "oil" in the second display, to indicate that the machine needs service. This program is used as memory to maintain a good and stable service program for the machine. With help of this option we can prevent that, if settled correctly, the oil is polluted in a way that it affects the optimal condition of the vacuum pump. For more information, contact your supplier or Henkelman BV.

### SLEEPER FUNCTION



Both the standard digital and sensor controls have the possibility to activate a sleeper function. The sleeper function ensures that the pump switches off after the period programmed into the sleeper function (while the controls remain active) if the machine is not in use for a significant period of time. The pump will automatically reactivate when the machine is used. This function eliminates unnecessary noise pollution caused by the pump. The sleeper function will only activate after the first cycle has been completed.

It is necessary for the pump to heat up for a minimum of 15 minutes prior to the packaging in order to allow it to reach its operating temperature.

Contact your supplier or Henkelman BV if you have any questions or comments regarding this specific option.

### CONDITIONING PROGRAMME "C" (only necessary in case the sleeper function is activated)




A conditioning program has been included to limit the contamination of the oil caused by the packaging of damp products (this means products that contain moisture, but also liquids and sauces).

This option is only useful if the sleeper function is activated

Regular use of this option will prevent unnecessary oil changes and the possibility of pump corrosion caused by the excess water in the oil. Read more on this on page 22.

### EXTERNAL SEAL PRESSURE

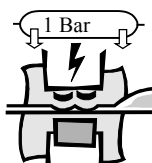

In some specific packaging processes, the normal seal system may require extra seal pressure in order to guarantee an effective seal. For these cases, a hose coupling can be fitted to the back of the machine. This hose coupling is connected directly to the seal system. It is possible to connect compressed air to this coupling. NOTE: the maximum pressure for an external connection is 1 ATO (see photo of the connector). (Refer to the specifications in the machine specifications chapter).



Photo - Connectors for the gas supply and external seal pressure

## SWITCHING THE MACHINE ON

### MAIN SWITCH

The main switch is mounted on the back of the machine. The main switch ensures that there is no voltage in the machine when it is in the [OFF] position.

The machine must always be switch off during service, maintenance and cleaning operations.

It is advisable to switch the machine off if it is not in use for a significant period of time.



### CONTROL SWITCH

The control switch is used to switch the machine on and off before and after use. The control switch ensures that all components are brought into operation.

NOTE: the control switch does not make the machine completely dead (no voltage). This is only the case if the main switch is in the [OFF] position.



## STARTING THE MACHINE

Pressing the control switch starts the machine (Main switch [ON] position). As the machine starts, two codes will be displayed on the control panel.

- ❑ The first code will indicate the machine version (configuration).



- ❑ The second code will indicate the software version of the control.



This information is significant for the supplier if you wish to receive information on the version and the options offered by the machine and its controls. It is also wise to have these codes, and also the machine type and number, on hand if any problems should occur.

The above codes are purely mend as an example, and not corresponding with the actual codes of your machine.

After displaying both the codes, the default program number will be shown, and the pump will start, the machine is ready to use. It is advisable to allow the machine to run for 15 minutes before commencing packaging. The oil will be heated and the pump will reach its optimum operating temperature after 15 minutes.

- ❑ Service-indicator If the [oil] message is displayed when the machine starts, this indicates that the programmed service period has expired.




If this is the case, you can contact your supplier who will carry out any agreed maintenance operations. The default setting of the service indicator is [OFF]. Your dealer can program the service period of your machine to ensure that regular preventive maintenance is carried out. This indicator is particularly useful as a memory jogger for required oil changes.



### NOTE

It is still possible to use the machine if [oil] is displayed. However, we recommend making an appointment for a service or oil change as soon as possible.

## DESCRIPTION OF THE CONTROL PANEL

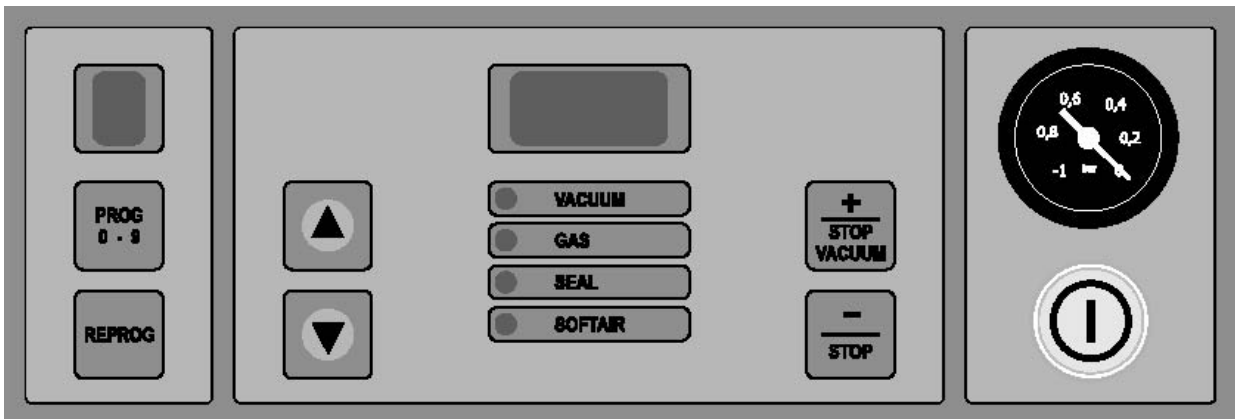

The control panel has two displays with which all the functions can be programmed. The progress of the packaging process can be monitored on these displays.



### DISPLAY 1

This display indicates the number of the active program during the programming of the process values or during the course of the packaging process. Display [C] indicates that the machine is running through the conditioning program (see page 22).



### DISPLAY 2

This display shows the programmed values of the various functions. A value on the right indicates the time of the function, while values on the left indicate the pressure in the chamber. If a sensor is used, a percentage is programmed (this percentage corresponds with the actual pressure).

0% = atmospheric pressure  
99% = 10 mbar




### PROG BUTTON

The correct program can be selected with this button. There is the range from 0 till 9 and "C". Program 0 cannot be changed; this is for service and maintenance purpose only.



### REPROG BUTTON

This button is used to record or change the program settings. The program in question must first be selected with the [PROG] button. Pressing the [REPROG] button opens the program (the program number will flash), allowing the correct settings to be programmed. Pushing the report button again will record the changed values. The program number will then stop flashing.

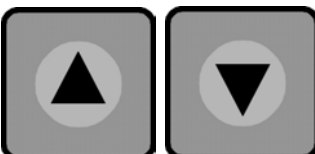

### FUNCTION SELECTION BUTTONS

These buttons are used to select the desired function (vacuum, gas, seal, soft-air) within a program. The function display light will switch on if the function is active.



#### COMBINATION BUTTON [+] and [ STOP VACUUM ]

Use this button to increase the function values while configuring the program. If this button is used while the machine is in operation, the current function will be terminated and the following function will be started.



#### COMBINATION BUTTON [-] and [ STOP ]

Use this button to decrease function values while configuring a program. The entire program will be terminated immediately if this button is used while the machine is in operation; regardless of what function is active at the time the button was pressed. The result will be that the machine will decompress until the lid opens.



#### CYCLE DISPLAY

These LEDs indicate the functions that are currently active during the configuration of programs or while the machine is in operation.



#### VACUUM METER

The vacuum meter indicates the actual pressure in the chamber. The following table indicates the vacuum percentages that correspond with the position of the vacuum meter.

Vacuum meter position	in %
0	0
0.2	20
0.3	30
0.4	40
0.5	50
0.6	60
0.7	70
0.8	80
0.9	90
-1.0	99

The vacuum meter will 'run up' to the left during the vacuum process. During the gas flush process, the vacuum meter will partially fall back to the right, and it will return to its original starting position during decompression.

# DESCRIPTION OF PANEL DISPLAYS OF INDIVIDUAL SUB-PROCESSES IN THE PACKAGING PROCESS

## GENERAL

The packaging process automatically runs through the individual functions. The maximum number of functions within the process is 6 - vacuum, vacuum plus, gas, seal, soft-air, decompression. The minimum number of functions is 3 - vacuum, seal and decompression. The number of functions is determined by the version of the machine (standard and optional versions). This chapter describes the displays of the individual functions on the control panel. The functions automatically follow each other in sequence within the entire packaging process.

The operational displays of the individual functions and the programming procedures for the configuration and saving of individual values are described in this and the following chapter.

## VACUUM FUNCTION



LED for vacuum function display



Display of vacuum time (right) or vacuum percentage (left)

The time can be programmed to a maximum of 99 seconds. In the case of sensor operation, the maximum vacuum percentage is 99%. However, a vacuum plus time can be programmed that will switch on automatically when 99% is reached. The vacuum plus time is an additional function that ensures the achievement of an optimum vacuum (only available at when programmed at 99%).

The correct value for the vacuum cycle depends on the chamber volume and the machine capacity. The vacuum meter indicates the pressure in the chamber, and this allows the time period for the creation of the vacuum to be determined on the basis of the readings on this meter.

The programming procedures for this cycle are described in the following chapter.

## GASFLUSH FUNCTION



LED on for gas function display



Display of gas time (right) or chamber pressure percentage (left)

The time of the gas flush process can be programmed to a maximum of 99 seconds. However, the maximum time for gas flush cycle in time-controlled programs is the time it takes the vacuum meter to return to 50% (see table on page 12). In the case of sensor operation, the minimum gas percentage is 30% (in terms of software). However, we recommend maintaining a minimum percentage of 50%. This means that the packaging will contain 50% gas and 50% vacuum. The minimum of 50% will guarantee good seal quality.

Information on the use, benefits and dangers of the gassing of products will be discussed in detail on page 31.

## SEAL FUNCTION



LED on for the seal function display



Seal time function display (right)

The sealing time can be programmed to a maximum of 6 seconds. However, the time that will create an optimum seal depends on the type of seal system and the type of packaging material. The standard seal system with standard vacuum packaging materials requires an average seal time of 2.5 to 3.0 seconds. A number of tests will have to be carried out on the packaging material in advance in order to determine the seal time that will create an optimum seal. Insufficient seal time will result in an inadequate or incomplete seal, and excessive seal time will result in seal that are burnt through.



### NOTE

The quality of the seal depends not only on the time, but also on the condition of the seal bar. The seal bar must undergo regular servicing - see pages 23 and 24.

## SOFT-AIR FUNCTION



LED on for soft-air function display



Soft-air time function display (right)

The time of soft-air can be programmed to a maximum of 99 seconds. The most suitable time can be determined on the basis of tests. If vulnerable and/or sharp products are being packaged, slow decompression (soft-air) for a specific time will prevent damage to the product or packaging material.

## DECOMPRESSION FUNCTION



The decompression function is displayed by means of horizontal stripes that jump up and down.

Decompression ensures that the chamber returns to the normal pressure level (1 ATO). After decompression, the process is complete and the packaging is finished. The lid opens automatically.






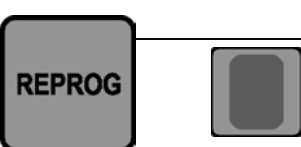
# PROGRAMMING VALUES WITH THE CONTROL PANEL

## GENERAL

There are two ways to program or change the values of a program: Manual and automatic programming. The procedures for both ways differ for digital control and sensor control. All programming options will be explained in this chapter, step by step.






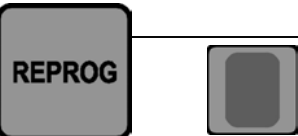
## MANUAL (RE)PROGRAMMING - DIGITAL TIME CONTROL

Lid open

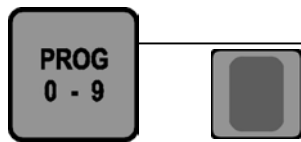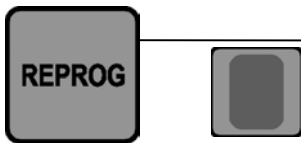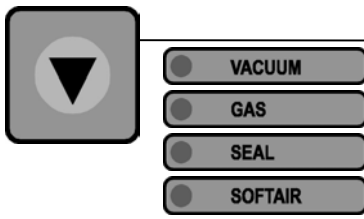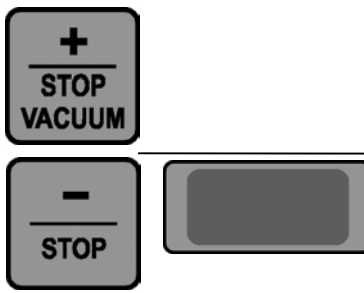- A.  Select the correct programme no. for reprogramming with the PROG <sup>0-9</sup> button
- B.  Press the REPROG button to access the (re)programming function. The programme number will start to flash.
- C.  Use the function selection button to select the desired function for the (re)programming of these (time) values. The LED for the desired function is now switched on.
- D.  Use the [+] and n [-] buttons to select the desired time value of the function. The time values will appear in the large display.
- E.  Repeat steps C and D for the programming of all desired functions. It is not necessary to run through all the functions. Steps C and D need only be carried out for the functions that require (re)programming.
- F.  Press the REPROG button to save the (re)programmed values and return to the normal operating function. (The programme number will now stop flashing)

## MANUAL (RE)PROGRAMMING - SENSOR CONTROL (optional)


Lid open

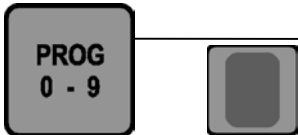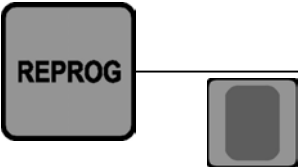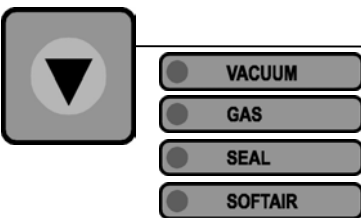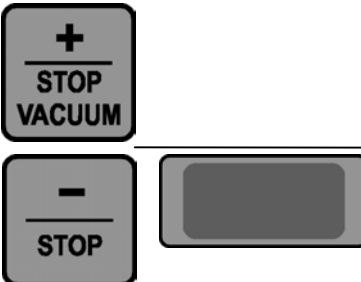- A.**  Use the PROG <sup>0-9</sup> button to select the correct programme no. for (re)programming
- B.**  Press the REPROG button to access the (re)programming function. The programme number will now start to flash.
- C.**  Use the function selection button to select the desired function for the (re)programming of these (percentage) values. The LED for the desired function is now switched on.
- VACUUM PLUS TIME**  
Pressing the function selection button once selects the percentage value of the vacuum function. If the value 99% is selected (see step D), VACUUM PLUS TIME will be displayed after the function selection button is pressed a second time. This time can be programmed with the aid of step D. Pressing this button a third time will move you on to the following step.
- D.**  Use the [+] and [-] buttons to select the desired (percentage or time) value of the function. The values are shown in the large display.
- E.**  Repeat steps C and D for the programming of any desired sub-process. It is not necessary to go through all the functions. Steps C and D need only be carried out for the function that requires (re)programming.
- F.**  Press the REPROG button to save the (re)programmed values and return to the normal operating function. (The programme number will stop flashing.)

### NOTES FOR THE MANUAL (RE)PROGRAMMER

- ☞ **DE\_ACTIVATING GAS FLUSH / SOFT-AIR CYCLE**  
The gas and/or soft-air cycles can also be switched off with the manual programming functions. During step D, the [-] button must be held down until OFF appears in the display. This indicates that the function has been deactivated within the program in question.
- ☞ **MACHINE VERSION**  
If the machine has not been fitted with a gas flush and/or soft-air function, it will not be possible to select this function during step C.


# AUTOMATIC (RE)PROGRAMMABLE - DIGITAL TIME CONTROL

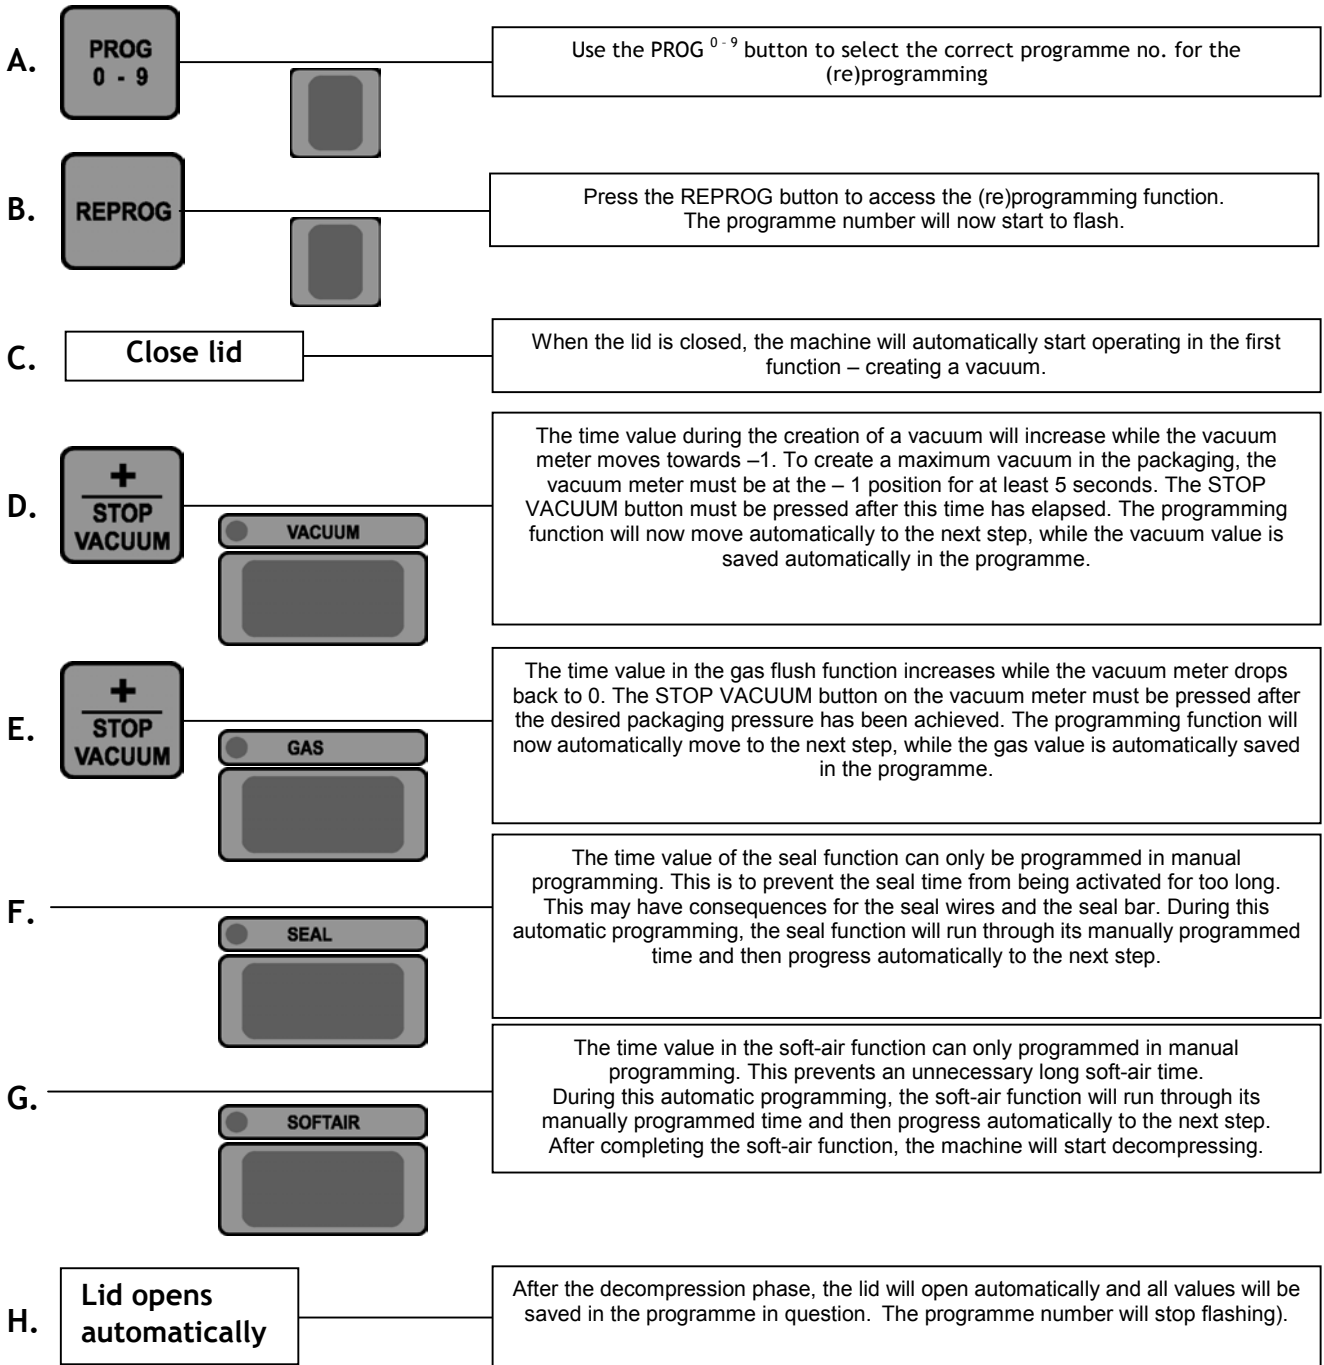

## NOTES REGARDING AUTOMATIC (RE)PROGRAMMING

- ☞ **SWITCHING OFF THE GAS FLUSH / SOFT-AIR CYCLE**  
The gas flush function and/or soft-air function can only be switched off with the manual programming functions. See manual programming on pages 15 and 16.
- ☞ **MACHINE VERSION**  
If the machine is not fitted with a gas and/or soft-air function, these functions will be skipped automatically during the automatic (re)programming.

## AUTOMATIC (RE)PROGRAMMING - SENSOR CONTROL

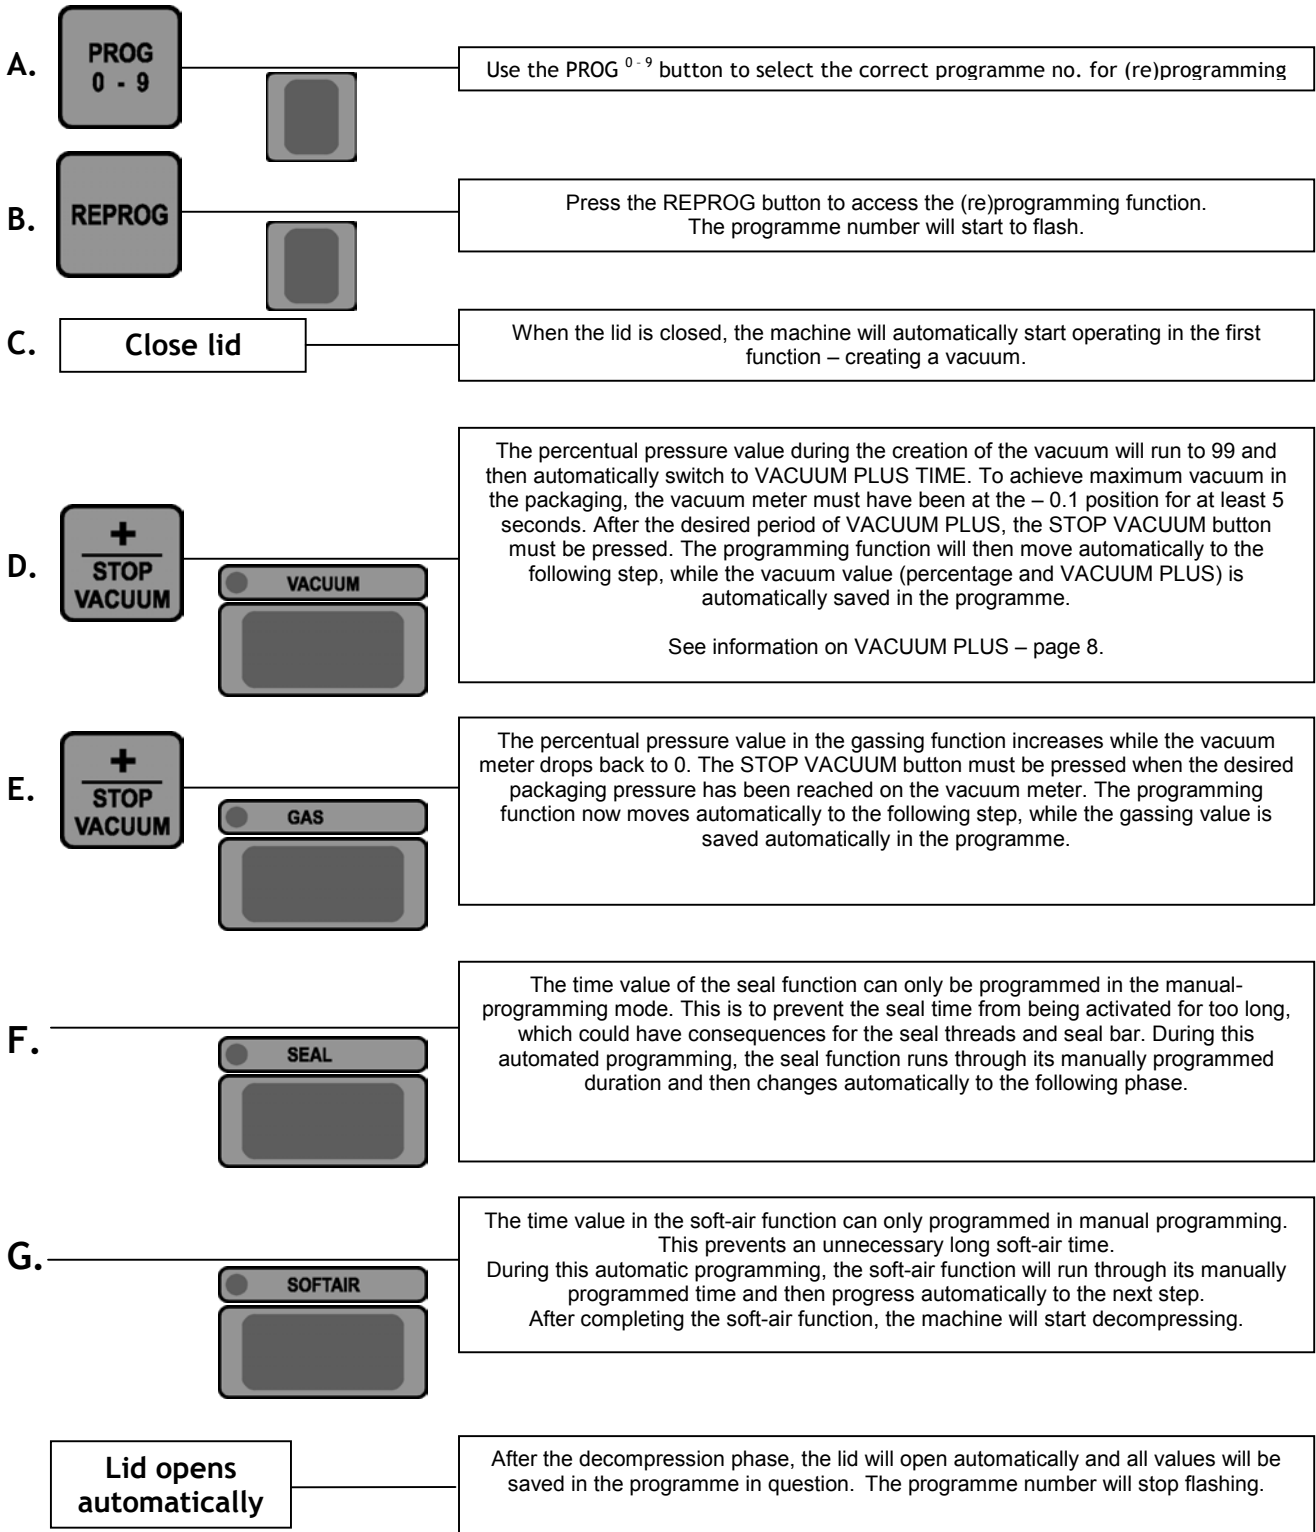

### NOTES REGARDING AUTOMATIC (RE)PROGRAMMING

 **SWITCHING OFF THE GAS FLUSH / SOFT-AIR CYCLE**

The gas flush function and/or soft-air function can only be switched off with the manual programming functions. See manual programming on pages 15 and 16.


 **MACHINE VERSION**

If the machine is not fitted with a gas and/or soft-air function, these functions will be skipped automatically during the automatic (re)programming.

# OPERATIONAL CONTROL OF THE MACHINE

## START PROGRAMME

1. Switch the machine on by means of the main switch and/or control switch.
2. Fill the vacuum bag with the product. Select a size of bag that the product will fit into easily, but that is also not too big. Ensure that conditions are hygienic during this process. The packaging material, product and hands must be clean and, if possible, dry.
3. Place the vacuum bag in the machine. The open side must be laid over the seal bar. However, the bag may not protrude outside the chamber. If the product is much lower than the silicon holder, it is recommended to use the filler plates supplied with the machine. This will make the process easier and shorten the cycle time.
4. The vacuum bag must be laid over the seal bar without creases.
5. If a gas flush system is used, the opening of the vacuum bag must be laid over the gas pipes.
6. Use the [PROG] button to select the desired program for the packaging process. Refer to the previous chapter for an explanation of the configuration of the desired programs, and refer to page 36 for the manufacturer's default programs.
7. Close the lid, and the machine will start the entire program by automatically running through all the functions. The lid will open automatically after the final function "decompression".
8. If desired, the process can be interrupted either partially or completely by respectively pressing the [VACUUM STOP] button or [STOP] button. The [VACUUM STOP] button interrupts the vacuum process and changes automatically to the next phase. The [STOP] button interrupts the entire process and goes directly to the decompression phase.
9. The packaged product can be removed from the machine.
10. If the machine is fitted with a cut-off seal system, the excess foil can be torn off.

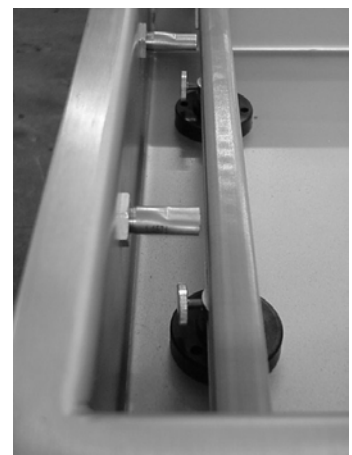

### NOTES

- Correct size and good quality vacuum bag
- Maximum 75% product filling in vacuum bag

# MAINTENANCE OF THE MACHINE

## GENERAL MAINTENANCE

Regular and complete maintenance is necessary for the prevention of disruptions and ensuring the optimum life span of the machine.

We recommend that you arrange the maintenance intervals in consultation with the supplier by means of a maintenance contract. If the machine is used intensively (more than 4 hours per day), we recommend a half-yearly service. In other cases, a single complete annual service will be sufficient. (This depends on location and application).

However, there are minor maintenance operations that must be carried out more frequently and that can be performed by the user. A maintenance schedule and these maintenance operations are provided in this chapter. The following important comments must be taken into account before you start any maintenance.

### IMPORTANT BEFORE AND DURING MAINTENANCE OPERATIONS

- ☞ Prior to performing any maintenance, ensure that the machine is completely switched off by the main switch.
- ☞ If the machine is not functioning correctly, the main switch must be switched off immediately in order to ensure that the machine is completely deactivated.
- ☞ If the maintenance schedule described in this chapter is not adhered to in its entirety, neither the supplier nor Henkelman BV can be held liable for possible disruptions or defects.
- ☞ Always consult the supplier or Henkelman BV if you have any questions or if there is any confusion regarding maintenance.
- ☞ Major service must be carried out by a recognized supplier.
- ☞ The machines are designed for a maximum of 8 hours use per day. If this period has clearly been exceeded, the supplier and manufacturer cannot be held liable for any disruptions or defects.
- ☞ High pressure cleaning of the machine is not permitted. High pressure cleaning may cause significant damage to the electronic and other components of the machine.
- ☞ Water may never be allowed to enter the extraction outlet of the chamber or the blow off outlet of the pump. This will irreparably damage the pump.
- ☞ The machine may never be tilted during transportation. This may damage the vacuum pump.

## MAINTENANCE SCHEDULE

- DAILY:** Clean the vacuum chamber, lid, and possibly the housing after use with a damp cloth. Never clean the machine with a high-pressure hose. This may cause defects in machine components. If the machine has been fitted with a transparent lid, never clean it with a synthetic cleaner.
- WEEKLY:** Check the oil level, paying close attention to quantity and clarity. If the oil is insufficient or extremely cloudy, the pump must be filled up with the correct type of oil (see page 21-23 for instructions). Be sure to check whether the oil filter needs changing (see photo of oil filling procedure).
- Check the seal bar for damage. Replace the seal wire and/or teflon tape if necessary (see page 23-24 for instructions). Pay close attention to the quality of the contra rubber and contra bar and replace if necessary.
- Check the lid seal and replace it if it has been damaged or pulled out. Ensure that exactly the right length is cut. (The ends must meet precisely) No opening may be created through which air in the chamber can flow. See correct length on page 24.
- HALF YEARLY:** Oil must be replaced a minimum of once every six months. Check the oil exhaust filter for counter pressure. Consult your supplier for more information.

## MAINTENANCE - OIL FILLING PROCEDURE

Depending on the model, the oil sight glass and oil-filling opening are on the back or the right of the machine.

300-500 and 700 types



600-800 types




## DRAINING OIL

If the oil check reveals that the oil is either white or cloudy, it must be replaced. Before the oil is drained, the machine must first be warmed up in order to make the oil thinner and better able to absorb the dirt. The conditioning program [C] can be used for this (see following page).

After the oil has been heated, the drainage plug is removed (note: it may be hot!). Ensure that as much of the dirt as possible is removed along with the oil. Replace the plug after drainage is completed.

## OIL FILLING

The oil-filling plug is unscrewed with an open-end spanner. This is the plug above the sight glass. The pump can now be filled up with oil. Ensure that filling is carried out in small amounts, poured in at short intervals. The oil level may not rise more than 2 mm above the gauge line (80%). It is better to top up too little than too much.

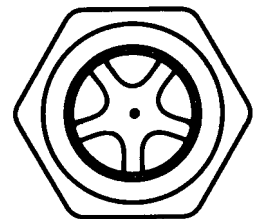

## CONDITIONING PROGRAMME "C". (only necessary in case the sleeper function is activated)

A conditioning program has been included to limit the contamination of the oil caused by the packaging of damp products (this means products that contain moisture, but also liquids and sauces).

This option is only necessary if the sleeper function is activated.

Regular use of this option will prevent unnecessary oil changes and the possibility of pump corrosion caused by the excess water in the oil.

### Method:


Run through the various program numbers with the aid of the "PROG" button. Stop when "C" Appears in the first display. The machine is now ready for the "Conditioning program".

Closing the lid will start the program.

The cycle will alternate between creating a vacuum and decompressing for a period of 15 minutes.

These 15 minutes will be counted down to zero in the second display.

During this cycle, an inspection light will run in the first display.

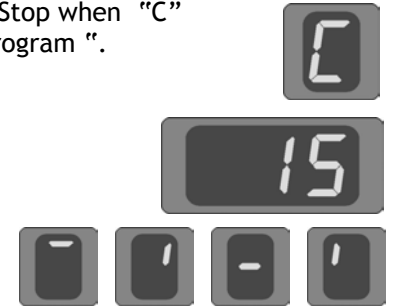

The program will terminate after 15 minutes.

The inspection light will fade.

'C' will once again be displayed in the first display.

To leave the "Conditioning program", use the 'PROG' button to select another program.

We recommend that you carry this procedure out at least once per week, and twice per week if you are packaging products that contain moisture.

## OIL TYPES

Take note of the type of oil used for the pump. Another type of oil may damage the pump. The following types of oil can be used in the machines.

Machine type	Pump type	Oil quantity	Oil type
300 Types / 500	063-122	1 litres	Viscosity VG 100
300 Types / 500 60 Hz.	063-132	2 litres	Viscosity VG 100
400 Types / 600 / 700	100-132	2 litres	Viscosity VG 100
800	302-132	6.5 litres	Viscosity VG 100

Examples of supplier's brands of these types of oil are Shell Vitrea 100, Aral Motanol GM 100, BP Energol CS 100 or Texaco Regal R+ O 100. The quantities of oil in the table are appropriate for the relevant pumps. The quantities of other types may differ. If the machine is used beyond normal ambient temperature specifications, see page 31 or consult your supplier for the correct type of oil.


## MAINTAINING THE SEAL BAR

The seal quality of the packaging is entirely dependent on the maintenance of the seal bar and the contra bar. The seal wires and teflon tape must be in good condition in order to guarantee a good seal. These components must be maintained regularly.

The seal bar and contra bar must be cleaned with a moist cloth on a daily basis. There may be no imperfections on the top of the seal bar and the silicon rubber in the contra bar must be in good condition and replaced regularly.

### REPLACING THE SEAL WIRES AND TEFLON TAPE

- ➔ Remove the seal bar from the machine by unscrewing the locking screws on the side of the bar or the screw if the bar is in the lid.
- ➔ Teflon tape is removed from the seal bar and the seal wires can now be removed by unscrewing the clamping plates.
- ➔ Check that both tension springs are present and correctly positioned before placing the new seal wires.
- ➔ Cut a new piece of seal wire to the length of the seal bar plus approximately 15 cm. If it is a double seal system or cot-off seal system, a second piece of seal wire or a piece of cot-off wire will have to be cut.
- ➔ Place the wire or wires in one of the clamping plates on the side of the seal bar and screw the clamping plates into place. Ensure that the wires are evenly placed over the width of the bar.
- ➔ Place the seal bar with the top facing down in a bench vice and tighten the seal wire or wires.
- ➔ The ends of the seal wires may now be inserted into another clamping plate and the clamping plate screw may be tightened manually. Use pliers to further tighten the threads.

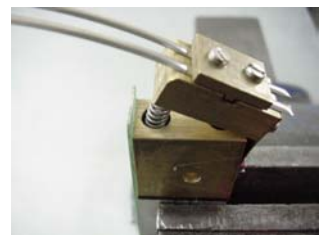


- For optimum wire tension, use the pliers as a lever. The tighter the wires, the longer they can be used.




- Cut the excess wire off after both wires have been tightened and fixed in place.

Cut off just under the clamping plate

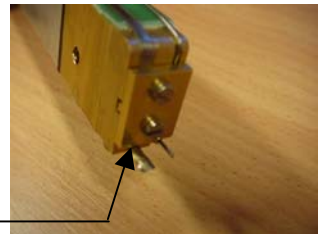

- Place a new piece of teflon tape on top of the new seal wires. Rub the Teflon tape so that the contours of the seal threads are clearly visible.

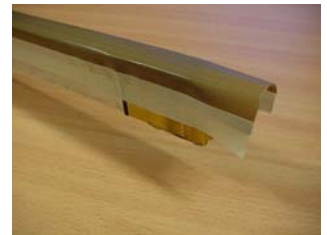

- Cut the Teflon as shown at the photo. (This is necessary because the ends must be able to move freely if the wire expand).



- Cut the Teflon tape so the hole for fixating the seal bar into the machine is free.



- The fastons (for the electrical connection of the seal bar) Make sure the washer is behind the electrical terminal.

- The seal bar can now be put back into the machine.



## POINTS OF ATTENTION WHEN REPLACING THE LID AND CONTRA RUBBER

### Lid rubber:

The length of the new lid rubber to be fitted is ascertained on the basis of the old rubber. A lid rubber that is too short or too long may cause problems when closing the lid.

The rubber must be placed evenly and without any tension.

The ends must be cut straight and laid tightly against each other. This will prevent leaks.



### Contra seal rubber:

In the same way, the length is ascertained on the basis of the old rubber.

Here too, the rubber must be pressed into the groove evenly and without tension in order to create a correct seal.

## DIMENSIONS AND SPECIFICATIONS OF SERVICE COMPONENTS FOR MAINTENANCE

HENKELMAN CODE	DESCRIPTION	MACHINE TYPES								
		300(A) II	300 AA	300 S	400 A KL	400 LL	500	600	700	800
0305000	Seal wire 3.5 x 0.3	4 x 760 (double) 2 x 840 (cut-off)			2 x 640 2 x 950	4 x 950	4 x 610	4 x 880	4 x 710	4 x 1100
0305010	Cut-off wire Ø 1.1	2 x 760 1 x 840			1 x 640 1 x 950	2 x 950	2 x 610	2 x 880	2 x 710	2 x 1100
0305510	Teflon tape	2 x 570 1 x 650			1 x 550 1 x 860	2 x 860	2 x 520	2 x 800	2 x 620	2 x 1050
0320210	Lid rubber 6 x 8	1 x 2500			3000	3000	2450	3000	3000	
0320228	Lid rubber 4 x 9									4000
0320200	Contra rubber 17 x 8	2 x 510 1 x 590			1 x 490 1 x 810	2 x 810	4 x 460	4 x 640	4 x 560	4 x 840
0939090	Oil filter	X			X	X	X	X	X	
0939091	Oil filter									X
0939011	Oil exhaust filter	1 x 50 Hz					1 x			
0939010	Oil exhaust filter	1 x 60 Hz			2 x	2 x		2 x	2 x	
0939015	Oil exhaust filter									3 x
0439520	Oil	1 litre			2 litre	2 litre	1 litre	2 litre	2 litre	6 litre

Dimensions are in millimetres. This table only includes the standard versions for machines. Consult your supplier for the dimensions and specifications of specific versions.


### MAINTENANCE OF A BI-ACTIVE SEAL MECHANISM

If the machine is fitted with a bi-active seal mechanism, the maintenance of the seal bars must be carried out with great accuracy and precision. The seal wires on the lower and upper bars must be positioned exactly below and above each other. We recommend that you ask your supplier to carry out this operation.


# ELECTRICAL DIAGRAMS

We have divided the electrical diagrams into a main current and control current diagrams. In addition, the single and double chambers have their own control current diagrams.


## Single chamber control diagram (300-400 Series):

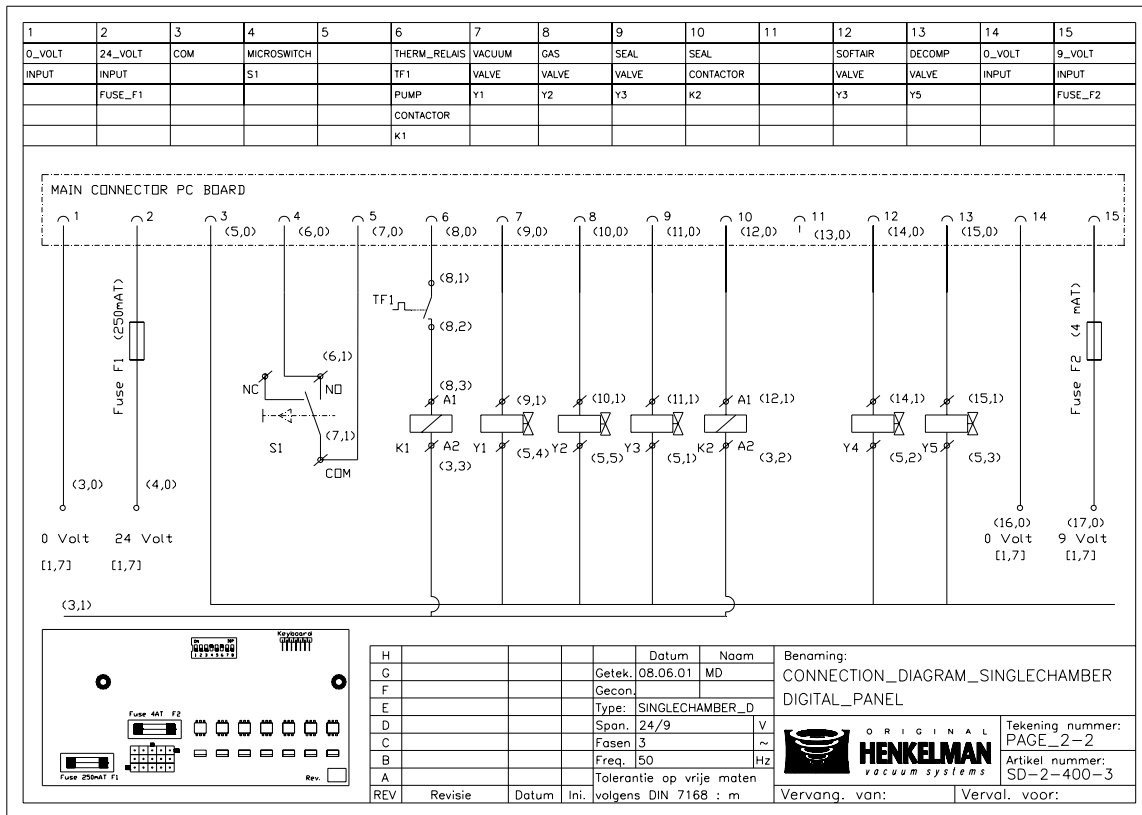


## Double chamber control diagram(600-800 Series):

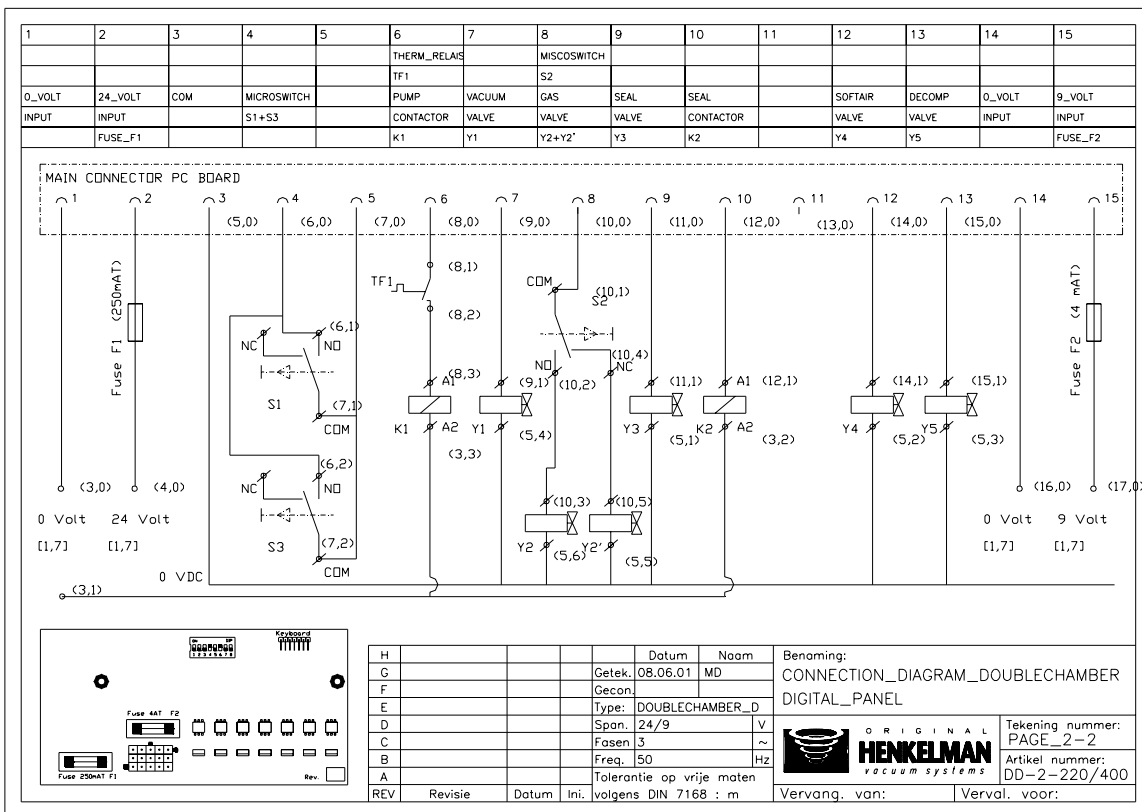

### Double chamber control diagram(500-700 Series):

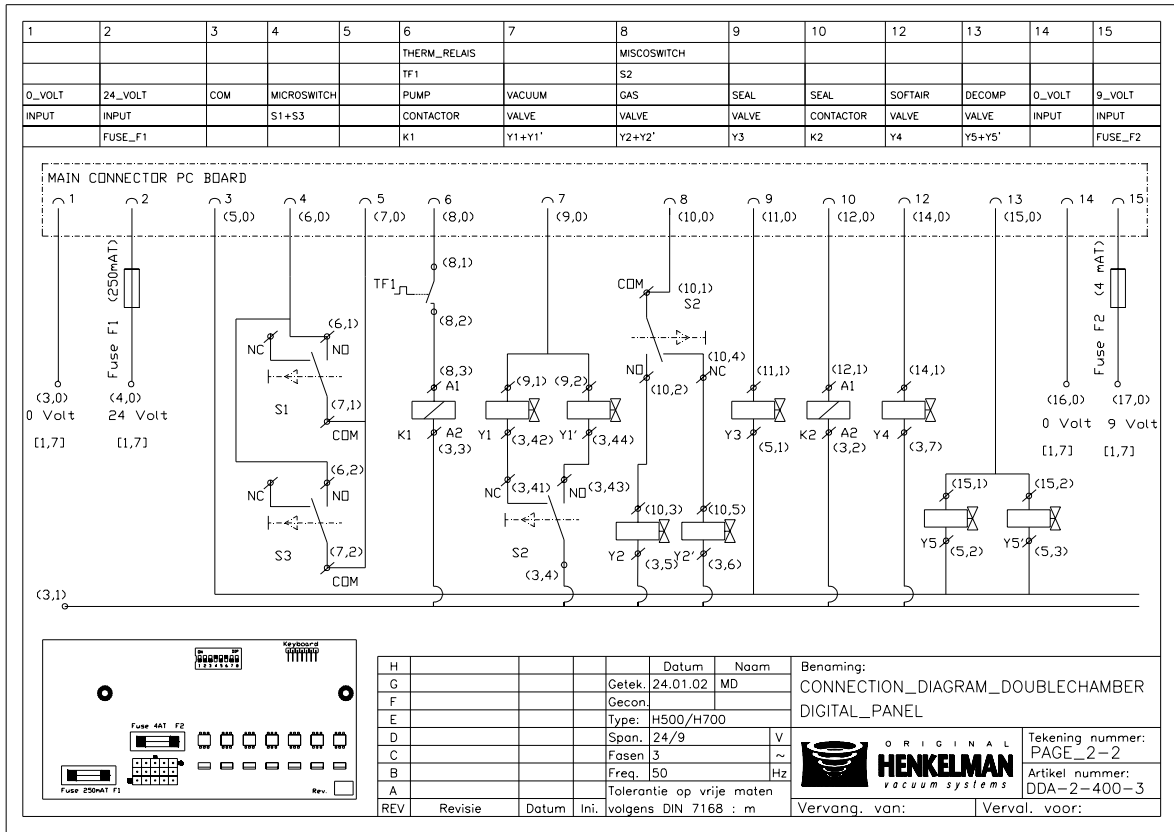

### Main current diagram for single and double chambers:

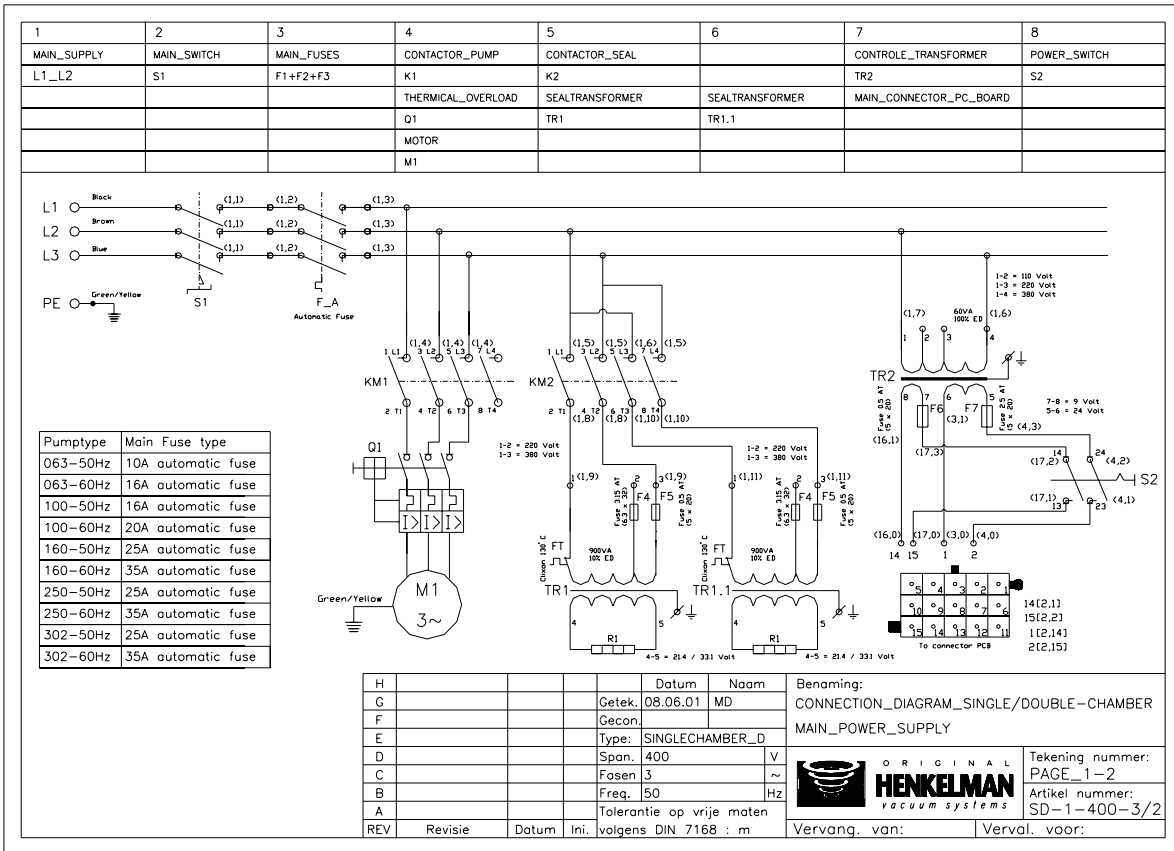

## Overview of the fuses used:

Various fuses are used in the machines described and are indicated in the relevant diagrams.

For the sake of completeness, the locations of these fuses are given again:

Depending on the type of machine and the relevant connection voltage, a circuit breaker or fuses will be mounted at the mains voltage entry point (in the electrical connection box).

Fuses are also fitted in any transformers used (control and seal transformers).

Two fuses are fitted to the control printed circuit board.

The various mains voltages mean that an enormous range of fuses has been used. For the correct values, we therefore refer you to the specifications for the component in question.

### **WARNING**


- To prevent fire and/or other irreparable damage, the replacement fuses must be of the same values and types.

# PNEUMATIC DIAGRAMS:


The pneumatic diagrams are sub-divided into the following groups:

- Single chamber with a transparent lid
- Single chamber with a closed Stainless Steel lid
- Double chamber with a aluminium casted chamber and lid with control window.
- Double chamber with a closed Stainless Steel lid.

Pneumatic diagram H300A & H300

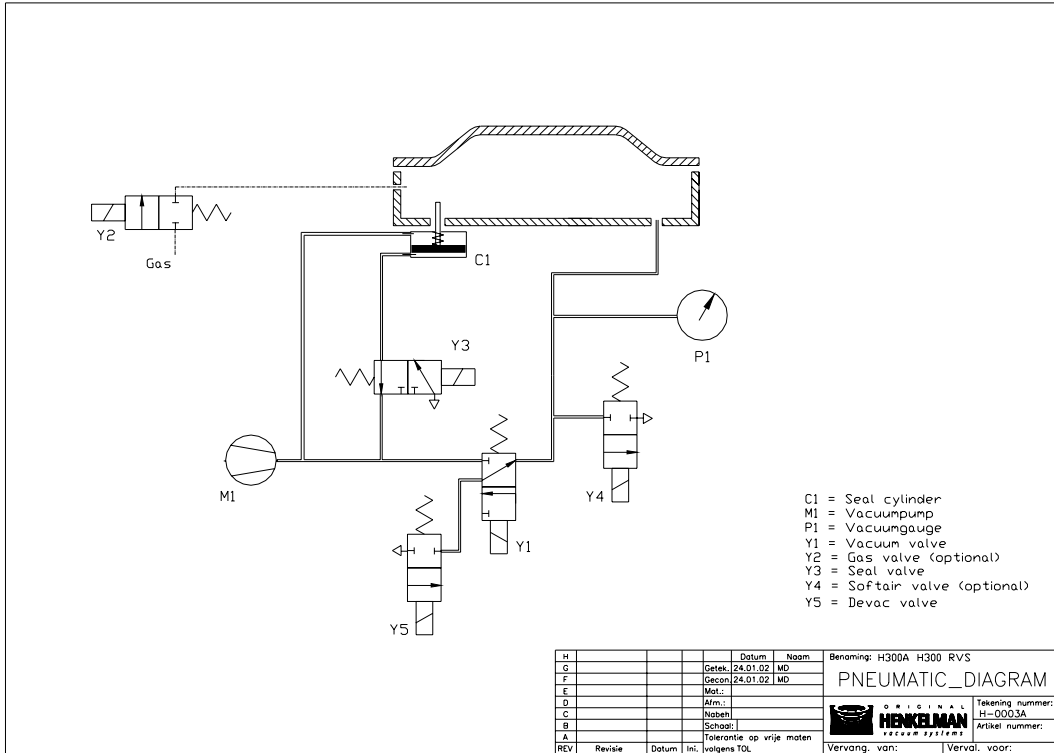


Pneumatic diagram H300RVS & H400RVS

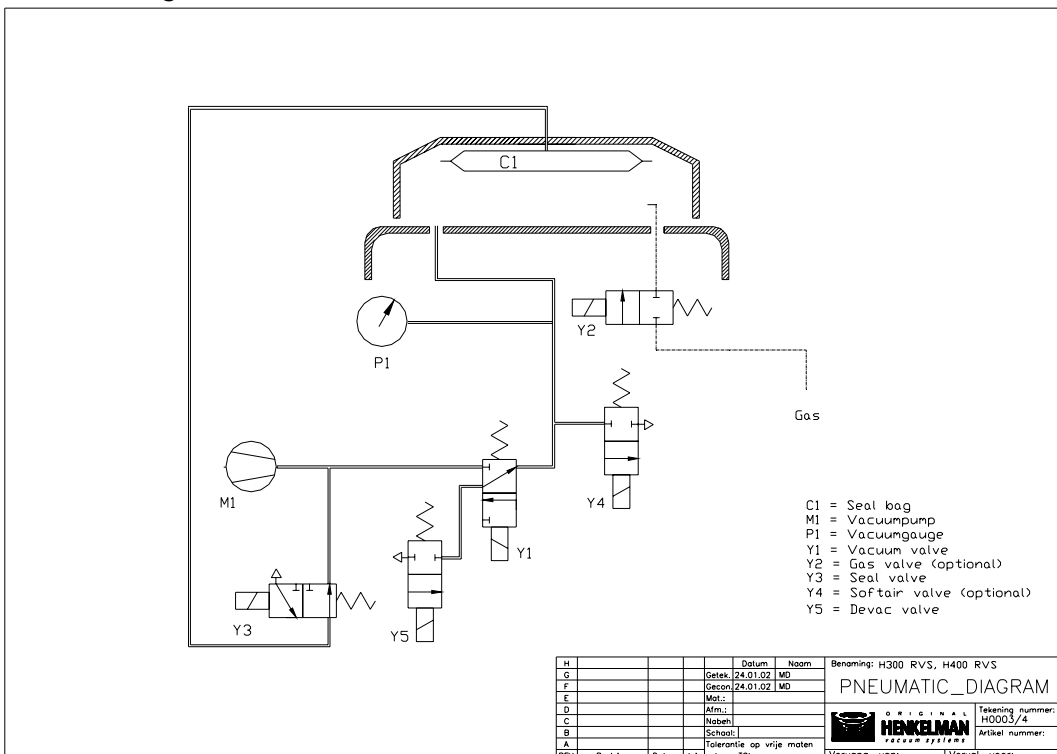


# PNEUMATIC DIAGRAMS - 2

Pneumatic diagram H500 & H700

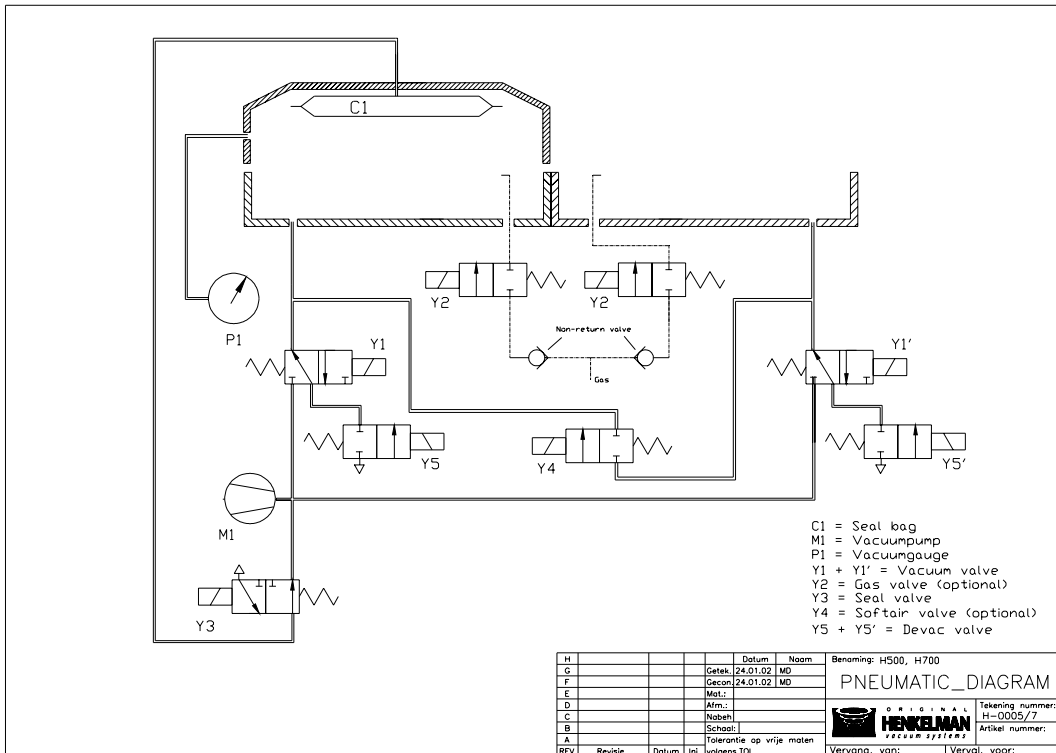

Pneumatic diagram H600 series & H800

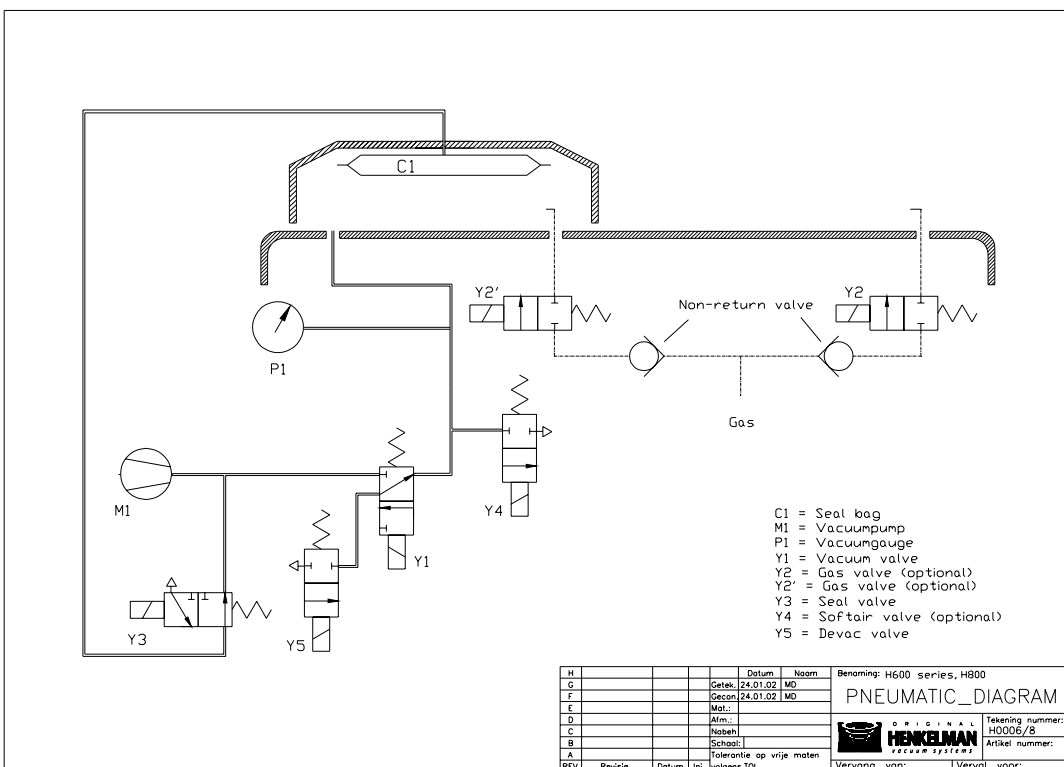

# IMPORTANT COMMENTS ON SPECIAL MACHINE VERSIONS & APPLICATIONS

## MACHINE WITH GAS FLUSH SYSTEM [MAP]

A package with a complete vacuum is subject to a pressure of 1 kilogram per cm<sup>2</sup> or 1 ATO. Some products are too fragile, soft or sharp, which may mean that this pressure will damage the product and/or the packaging.

A gas flush system that makes it possible to fill packaging with gas solves the problem of how to protect these products against vacuum pressure. Gas flush also provides other benefits for specific products in terms of storage life, presentation and handling. Contact your dealer and/or gas supplier for more information on gas flush packaging and types of gas mixtures.

The following points are extremely important when using a gas flush system:

- **NEVER USE GAS MIXTURES WITH MORE THAN 10-15% OXYGEN (O<sub>2</sub>). THIS CAN RESULT IN LETHAL EXPLOSIONS.**
- **NEVER USE SEPARATE GAS BOTTLES WITH A MIXER WHEN ONE OF THE BOTTLES CONTAINS OXYGEN. THIS CAN RESULT IN LETHAL EXPLOSIONS.**
- **All liability lapses and the guarantee are invalid for any accidents and/or damage resulting from the use of oxygen.**
- The maximum permitted gas pressure in the packaging is 50% (-0,5 bar on the vacuum meter). A higher gas pressure will have a negative effect on the seal quality. If a higher gas pressure is required, consult the supplier regarding the options for the connection of external seal pressure. Page 8.
- We recommend that you check the pressure and the quantity of gas in the gas bottle regularly and replace the bottle if there is insufficient pressure and the gassing cycle time is too long. Ensure that the gas bottles are secured correctly.
- Always close the main valve of the gas bottle when the machine is not in use or when the gas function is inactive.

## PACKAGING LIQUID PRODUCTS

The machines can also be used for the packaging of liquid products such as soups or sauces. The packaging principle is the same as that used for the packaging of dry products. However, the time of the vacuum process must be shorter than the time it takes for the liquid product to boil.

The boiling points of liquids are reached at lower pressure and higher temperatures. Tests will have to be carried out in order to ascertain the time that it takes for the product to boil.

The automatic programming (see pages 17-18) has a convenient configuration procedure for this. When the product reaches its boiling point, the STOP VACUUM button is pressed and the correct value (time or percentage) is immediately saved in the program.

The following table of the relationship between pressure and water temperature will serve as an indication:

Vacuum pressure [mbar]	1000	800	600	400	200	100	50	20	10	5	2
Temperature [°C]	100	94	86	76	60	45	33	18	7	-2	-13

## PROBLEM SOLVING - 1

PROBLEM	CAUSE	SOLUTION
The machine does not operate.	<ul style="list-style-type: none"> <li>• The plug has not been inserted into the wall socket.</li> <li>• The mains voltage fuse is (are) defective.</li> <li>• The circuit breaker in the electricity connection box is activated.</li> <li>• The contact block of the power switch has come loose</li> </ul>	<ul style="list-style-type: none"> <li>• Insert the plug into the wall socket.</li> <li>• Replace the fuse(s) (take note of the correct value)</li> <li>• Reset the circuit breaker.</li>   <li>• Check it and secure it again if necessary</li> </ul>
The machine is not operating but the operation light is lit.	<ul style="list-style-type: none"> <li>• The fuse on the printed circuit board has blown.</li> <li>• The fuse in the control transformer has blown</li> <li>• The lid switch is defective.</li>   <li>• There is an internal PCB defect.</li> </ul>	<ul style="list-style-type: none"> <li>• Remove the front panel and fit a new fuse.</li> <li>• Check it and replace it if necessary.</li> <li>• The lid switch must be set in the correct manner.</li> <li>• Consult your dealer.</li> </ul>
The lid does not open automatically.	<ul style="list-style-type: none"> <li>• The gas damper or spring is defective.</li> </ul>	<ul style="list-style-type: none"> <li>• Consult your dealer.</li> </ul>
There is insufficient vacuum.	<ul style="list-style-type: none"> <li>• The vacuum value has not been programmed long enough.</li> <li>• There is insufficient oil in the vacuum pump.</li>   <li>• The suction hole at the rear of the vacuum chamber has been partially block by the vacuum bag.</li> <li>• The lid rubber is worn out.</li> <li>• The oil is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>• Increase the vacuum time.</li>   <li>• Check the oil level and top up if necessary. The correct type of oil is necessary for the effective operation of the vacuum pump.</li> <li>• Lay the vacuum bag a little nearer to the seal bar.</li>   <li>• Replace the lid rubber.</li> <li>• Replace the oil with the prescribed oil type</li> </ul>
Machine creates vacuum too slowly.	<ul style="list-style-type: none"> <li>• The intake filter of the pump is blocked.</li> <li>• The oil exhaust filter is blocked</li> </ul>	<ul style="list-style-type: none"> <li>• Consult your dealer.</li>   <li>• Consult your dealer.</li> </ul>

## PROBLEM SOLVING - 2

PROBLEM	CAUSE	SOLUTION
<p>The vacuum bag has not been sealed correctly.</p>	<ul style="list-style-type: none"> <li>• The vacuum bag was not placed over the seal bar correctly.</li> <li>• The seal time has been set too long or too short.</li> <li>• The silicon rubber in the contra bar is damaged and/or worn.</li> <li>• The Teflon tape has been damaged.</li> <li>• The opening of the vacuum bag has been contaminated.</li> <li>• There has been gas flushed too far back</li> </ul>	<ul style="list-style-type: none"> <li>• Place the vacuum bag tightly and smoothly over the seal bar. Ensure that the opening of the bag always stays inside the vacuum chamber.</li> <li>• Set the seal time longer or shorter.</li> <li>• Replace the silicon rubber.</li> <li>• Replace the Teflon tape.</li> <li>• Clean the opening of the vacuum bag.</li> <li>• Check this by switching the gas function off.</li> </ul>
<p>The gas percentage in the vacuum bag is insufficient (optional).</p>	<ul style="list-style-type: none"> <li>• The gas bottle is empty or nearly empty.</li> <li>• The gas bottle is still closed.</li> <li>• The gas flushing value has been set too long or too short.</li> <li>• The gas pressure has been set incorrectly.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace the gas bottle.</li> <li>• Ascertain whether the gas bottle valve is closed. If so, open it.</li> <li>• Increase or decrease the gas flush value.</li> <li>• Check the pressure gauge to ensure that the gas pressure has been set to 1 atmosphere.</li> </ul> <p><b>WARNING! The pressure of the gas mixture may never be higher than 1 atmosphere.</b></p>

### WARNING

- To prevent fire and/or other irreparable damage, the values and types of the replacement fuses must correspond with the originals.

## **LIABILITY**

1. We exclude all responsibility inasmuch it is not provided for by law.
2. Our liability will never exceed the total amount of the particular order.
3. Subject to the generally accepted rules of law concerning public order and good faith, we are not obliged to compensate for damages of any nature, direct or indirect, including operational damages to movable and immovable property or damage to any persons including the contracting party or any third party.
4. Under any circumstances we are not responsible for damage that is caused by or is the result of misuse of the equipment as delivered or through using said equipment for any other purpose than for what the contracting party has purchased it.

## **GUARANTEE**

1. In compliance with the under mentioned restrictions, we guarantee the equipment as delivered by us for a period of 6 months. This guarantee is limited to those malfunctions occurring due to factory defects, and does not include malfunctions that are caused by any form of wear or tear during use of the equipment or parts as delivered.
2. Any parts or attachments that we have received from any third party are not guaranteed for any period longer than the guarantee given us by said third party.
3. The guarantee is cancelled if the contracting party or any third party brought in by the contracting party, uses the equipment in an incompetent manner.
4. The guarantee is also cancelled if the contracting party or any third party brought in by the contracting party, makes any changes or adjustments to the equipment as delivered.
5. If it is necessary to replace any parts in accordance with this guarantee, than all parts replaced become our property.
6. If the contracting party fails to fulfill in whole or part of any obligations in compliance with this agreement for any period of time, then we are not bound to the guarantee as long as the situation continues.

The term of warranty and liability are a subdivision of the general sales conditions and are available on request.

## MACHINE SPECIFICATIONS FOR STANDARD MODELS

	<b>300</b>	<b>300 A</b>	<b>300 AA</b>	<b>300 S KK</b>
Model:	Floor	Floor	Floor	Floor
Cycle period:	15-40 sec.	15-40 sec.	20-45 sec.	15-35 sec.
Double seal:	standard	standard	standard	standard
Soft-air:	standard	option	option	standard
Net seal length (mm)	1 x 590 or 2 x 500	1 x 600 of 2 x 500	2 x 500	2 x 500
Final vacuum:	99.95%	99.95%	99.95%	99.95%
Vacuum pump (Busch):	063 m <sup>3</sup> /u	063 m <sup>3</sup> /u	063 m <sup>3</sup> /u	063 m <sup>3</sup> /u
Vacuum chamber:	Stainless Steel	Aluminium	Aluminium	Stainless Steel
Housing:	Stainless Steel	Stainless Steel	Stainless Steel	Stainless Steel
Lid:	transp. plastic	transp. plastic	Aluminium	Stainless Steel
Dimensions in mm, Machine (w x l x h):	680 x 680 x 1020	680 x 680 x 1020	680 x 680 x 1020	680 x 680 x 1020
Chamber (l x h):	490 x 520 x 170	490 x 520 x 170	490 x 520 x 210	490 x 520 x 190
Ambient temperature:	min.5 °C,max 30 °C	min.5 °C,max 30 °C	min.5 °C,max 30 °C	min.5 °C,max 30 °C
Electrical, Mains voltage:	see type plate	see type plate	see type plate	see type plate
Frequency:	see type plate	see type plate	see type plate	see type plate
Capacity:	see type plate	see type plate	see type plate	see type plate

	<b>350 KK</b>	<b>400 A KL</b>	<b>400 LL</b>	<b>500</b>
Model:	Floor	Floor	Floor	Double chamber
Cycle period:	15-40 sec.	15-35 sec.	15-40 sec.	15-35 sec.
Double seal:	standard	standard	standard	standard
Soft-air:	standard	option	standard	option
Net seal length (mm)	2 x 320	1 x 760 1 x 475	2 x 805	2 x 440
Final vacuum:	99.95%	99.95%	99.95%	99.95%
Vacuum pump (Busch):	063 m <sup>3</sup> /u	100 m <sup>3</sup> /u	100 m <sup>3</sup> /u	063 m <sup>3</sup> /u
Vacuum chamber:	Stainless Steel	Aluminium	Stainless Steel	Aluminium
Housing:	Stainless Steel	Stainless Steel	Stainless Steel	Stainless Steel
Lid:	transp. plastic	Aluminium	Stainless Steel	Aluminium
Dimensions in mm, Machine (w x l x h):	465 x 1050 x 1010	800 x 900 x 1050	760 x 920 x 1150	880 x 1080 x 1070
Chamber (l x h):	320 x 890 x 100	760 x 515 x 210	455 x 830 x 190	470 x 570 x 210
Ambient temperature:	min.5 °C,max 30 °C	min.5 °C,max 30 °C	min.5 °C,max 30 °C	min.5 °C,max 30 °C
Electrical, Mains voltage:	see type plate	see type plate	see type plate	see type plate
Frequency:	see type plate	see type plate	see type plate	see type plate
Capacity:	see type plate	see type plate	see type plate	see type plate

	<b>600</b>	<b>675</b>	<b>700</b>	<b>800</b>
Model:	Double chamber	Double chamber	Double chamber	Double chamber
Cycle period:	15-40 sec.	15-35 sec.	15-35 sec.	15-40 sec.
Double seal:	standard	standard	standard	standard
Soft-air:	standard	option	option	standard
Net seal length (mm)	2 x 620	2 x 620	2 x 540	2 x 840
Final vacuum:	99,95%	99,95%	99,95%	99,95%
Vacuum pump (Busch):	100 m <sup>3</sup> /u	160 m <sup>3</sup> /u	100 m <sup>3</sup> /u	300 m <sup>3</sup> /u
Vacuum chamber:	Stainless Steel	Stainless Steel	Aluminium	Stainless Steel
Housing:	Stainless Steel	Stainless Steel	Stainless Steel	Stainless Steel
Lid:	Stainless Steel	Stainless Steel	Aluminium	Stainless Steel
Dimensions in mm, Machine (w x l x h):	870 x 1550 x 1180	1200 x 1550 x 1080	1010 x 1280 x 1070	1200 x 2000 x 1180
Chamber (l x h):	620 x 500 x 210	620 x 750 x 210	580 x 700 x 210	840 x 830 x 210
Ambient temperature:	min.5 °C,max 30 °C	min.5 °C,max 30 °C	min.5 °C,max 30 °C	min.5 °C,max 30 °C
Electrical, Mains voltage:	see type plate	see type plate	see type plate	see type plate
Frequency:	see type plate	see type plate	see type plate	see type plate
Capacity:	see type plate	see type plate	see type plate	see type plate

# MACHINE SPECIFICATIONS

## OIL SPECIFICATIONS

Recommended oil types for deviating ambient temperatures

Ambient temperature	Recommended oil types
5-12 °C	VM 068
30-40 °C	VS 100 or VE 101

## ELECTRICAL CONNECTION

The maximum voltage fluctuation is +/-10% of the official voltage stated on the type plate.

## GAS BOTTLE CONNECTION SPECIFICATIONS

The maximum gas pressure in the machine is 1 ATO. This pressure is adjusted at the gas bottle by means of a gas pressure distributor. The following specifications apply to the connection of the bottle to the machine.

Machine type	300	400	500	600	700	800
Hose column: Ø 8 mm	X	x	x	x	x	
Hose column: Ø 13 mm						x

## EXTERNAL SEAL PRESSURE CONNECTION SPECIFICATIONS

Maximum permissible pressure	1 bar
Composition	Dry compressed air
Hose connection	Hose column Ø 6mm

## NOISE LEVEL SPECIFICATION

Measured noise level for all types	< 70 DB
------------------------------------	---------

## WEIGHTS AND VOLUMES

Machine type	300	300 AA	400	400 A	500	600	675	700	800
<b>Machine dimensions</b>									
L	68	68	91	91	108	87	120	127	120
W	68	68	74	74	89	155	155	102	200
H	102	102	112	112	104	118	118	104	118
<b>Machine dimensions packed</b>									
L	87	87	108	108	126	173	173	108	218
w	87	87	96	96	103	98	133	146	133
H	130	130	140	140	132	139	138	140	138
<b>Volume packed (m3)</b>	0.98	0.98	1.45	1.45	1.71	2.35	3.17	2.20	4.00
<b>Weight unpacked (kg)</b>	142	147	251	200	210	359	535	315	657
<b>Weight packed (kg)</b>	200	205	317	273	293	479	660	427	855

## MANUFACTURER'S DEFAULT PROGRAMME SETTINGS DIGITAL TIME CONTROL

Programme	0*	1	2	3	4	5	6	7	8	9
Vacuum value	30	25	20	15	10	30	25	20	20	15
Gas value	OFF	OFF	OFF	OFF	OFF	5	5	10	15	15
Seal time	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5
Soft-air time	3	3	3	3	3	2	2	2	2	2

## MANUFACTURER'S DEFAULT PROGRAMME SETTINGS SENSOR CONTROL

Programme	0*	1	2	3	4	5	6	7	8	9
Vacuum value	99	99	99	99	99	99	99	OFF	OFF	OFF
Vacuum plus time	15	10	15	10	10	10	OFF	30	30	30
Gas value	OFF	OFF	80	70	60	50	80	OFF	80	OFF
Seal time	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5
Soft-air time	3	3	2	2	2	2	2	2	2	2

## CLIENT PROGRAMME SETTINGS - TO BE FILLED IN

Programme	0*	1	2	3	4	5	6	7	8	9
Vacuum value	99									
Vacuum plus time	15									
Gas value	OFF									
Seal time	2,5									
Soft-air time	3									

\* Programme number 0 cannot be changed

## NOTES: